

(Attach Label)

**FUEL TANK
WARNING
LABEL**

INSTALLATION FORM RZ-NA 461-WL

REZNOR *Thomas & Betts*

APPLIES TO: Models RA, RAD, RAB

◀◀ **IMPORTANT** ▶▶

Warning Label Instructions

To prevent unwanted and potentially dangerous liquids from being added to the oil storage tank, the attached warning label is provided with your new Model RA/RAD waste oil unit heater or Model RAB waste oil boiler. The label **MUST** be affixed in accordance to the following instructions:

1) Select a location for the Warning Label -- *The warning label must be readily visible to the person filling the tank.* (Do not select a horizontal surface where spilled oil may accumulate.)

If fuel is poured directly into the tank, select a label location as close as possible to the fill opening. (If installing a Reznor Model OT-250 storage tank, the tank is factory-equipped with this warning label. The attached label may also be affixed to the tank or may be discarded.)

If an auxiliary transfer pump or piping is used to convey oil to the tank from another area, select a label location at the point where the fuel is *first introduced* to the system.

2) Affix the Label -- At the selected location, clean and dry the surface, being sure it is free of any oil residue. Remove the backing and adhere the warning label.

3) IMPORTANT -- Make sure that the heater owner and all persons responsible for adding fuel to the tank are aware of the warning.

Thomas & Betts

Mfg No. 122997

©2001 Thomas & Betts Corporation, All rights reserved.

Printed in U.S.A.

MANUFACTURER OF GAS, OIL, ELECTRIC HEATING AND VENTILATING SYSTEMS

Trademark Note: Reznor® is registered in the United States and other countries.

1-800-695-1901; www.ReznorOnLine.com

9/01 Form 461-WL (Version .3)