

# REZNOR® DUCT HEATERS

## Table of Contents

	<u>Model</u>	<u>Description</u>	<u>Page No.</u>
	<b>EEDU</b>	Power Vented Duct Furnace Description / Standard and Optional Features ..... 2 Technical Data / Dimensional Data ..... 3	
<b>INDOOR MODELS</b>	<b>SC</b>	Separated Combustion, 80% Thermal Efficient Duct Furnace Description / Standard and Optional Features ..... 4 Technical Data / Dimensional Data ..... 5	
	<b>X</b>	Gravity-Vented, 80% Thermal Efficient Duct Furnace Description / Standard and Optional Features ..... 6 Technical Data / Dimensional Data ..... 7	
	<b>RP</b>	Power-Vented, 80% Thermal Efficient Duct Furnace Description / Standard and Optional Features ..... 8 Technical Data / Dimensional Data ..... 9	
<b>OUTDOOR MODELS</b>	<b>CRG</b>	80% Thermal Efficient, Gravity-Vented Duct Furnace Description / Standard and Optional Features ..... 10 Technical Data / Dimensional Data ..... 11	
	<b>RG</b>	Gravity-Vented Duct Furnace Description / Standard and Optional Features ..... 12 Technical Data / Dimensional Data ..... 13	
<b>GENERAL APPLICATION DATA</b>		Sample Specifications ..... 14	
		General Power Venting Arrangements ..... 15	
		Separated Combustion Benefits / Venting ..... 16-18	
		Pilot, Gas Control Descriptions ..... 18-19	
		Fan Control Descriptions ..... 19	
		Air Flow / Static Pressure Data ..... 20-21	
		Sizing By-Pass Air Duct ..... 21	
		Installation Requirements ..... 22-23	
	Blower Arrangements ..... 24		
	Limited Warranty ..... 25		

**IMPORTANT: This guide is not intended to provide specifications and technical information only.**

**This guide is not intended to be an instruction manual. When installing heating and ventilating equipment, you must check and conform to all local and national building codes. Improper installation of heating equipment could be dangerous. Consult manufacturer's installation manual for instructions and important warnings.**

**All specifications subject to change without notice.**